



Programming Novomatic Operators

On the motor head identify the Oval and the two Triangular buttons next to the LED Display
These are behind a screen, this will need releasing:

DC 650 & 800 T, R500 & R700; Screen drops down on the face of the motor nearest the door
553, 553S & 553 S III; The Rear Clear Screen lifts up

423 & 563S; There is a rectangular hole at the rear of the motor unit, insert a small screwdriver to release catch that holds the cover, the cover then swings down to reveal the buttons

Novoport or Novorol; Open the "Oval" Button / Screen to reveal the Triangular, Oval programming Buttons and the LED Display

Deleting only the Handsets

Turn the Unit off at the mains

Press and hold down the Oval button on the motor head

Continue to hold down the buttons as the Mains Electricity is turned on

After 2 seconds of the power being turned on release the Oval Button

The unit will display "0", if it instead displays a flashing "1." press the Oval Button twice to cycle to "0"

Test a previously working handset(s) to ensure deletion

Refer to "Program Handsets" paragraph below to reprogram the handsets

Factory Reset

Turn the Unit off at the mains

Press and hold down the two triangular buttons on the motor head

Continue to hold down the buttons as the Mains Electricity is turned on

Release when "3" appears and it should be flashing / operator starts to move

Now re-program from start – Open and Closed positions and Handsets (Remote Controls)

Programming the Open and Closed Position (Except Novorol)

Connect the door to the operator. Ideally not at either the fully open or fully closed position

Press the Oval button on the motor head for "3" Seconds

– As soon as a Number "3" appears on the LED Display release the Oval Button on the motor head

The "3" Should be flashing

Using the Triangular buttons to get the door to the fully open position

– Then briefly Press the Oval Button on the motor head (To Store this position)

The "3" should become a "4" and be flashing

Using the Triangular buttons to get the door to the fully closed position

– Then briefly Press the Oval Button on the motor head (To Store this position)

The "4" should become a "0"

The positions are now set, the up triangular button is now set as an impulse. Tap this once to open the door, then tap the same button again to close it, repeat this cycle once more and the "0" should become a "."

The force limits are now set

To Program Handsets (Novotron 302/502/504/512/522/523/524)


Briefly Press the Oval button on the motor head and the "0" becomes a Flashing "1" with a "." At the bottom

Get the handset and press and hold down the button on the handset you want to work the door, hold down until the "." Stops flashing (5 Flashes)


"0" will re-appear - Repeat for each handset.

Accessing Programming buttons on:

DC 650 & 800 T, R500 & R700

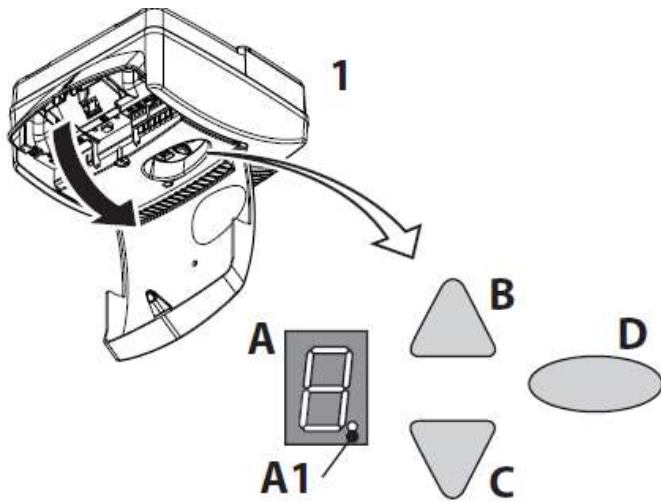

Novomatic 553, 553S, 553 S III

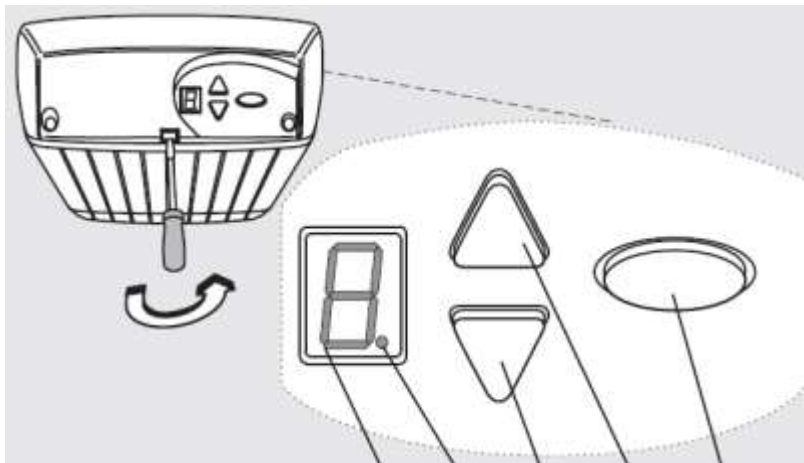

Novoport I, II, III, IV & Novorol

