

Handset Programming


Section 1: Programing the First Remote Direct to the Control Panel

Parts Required

- 1x Teleco 868MHz Handset
- 1x Small Phillips Screwdriver
- 1x Circuit Diagram Overleaf (Figure 1)
- 1x Assembly Drawing (Figure 2)

Method

1. Remove the light cover using the side clips. Remove the bottom cover strip and unscrew the four front screws. (Figure 2)
2. Be careful to unclip the ribbon strip when pulling the front cover away from the control board.
3. Press and hold the P1 (PRG) button. (Figure 1)
4. The buzzer emits a continuous beep, keep P1 held down and press any button on the handset.
5. Once the memorization is successfully completed, the continuous beep will become an intermittent one.
6. Press the programmed button on the handset to test it.

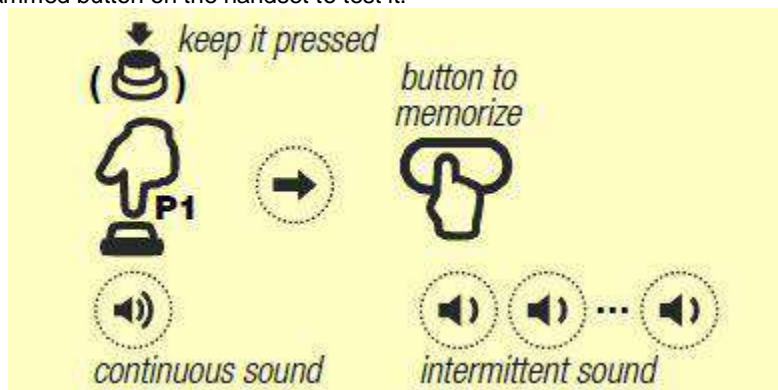


Section 2: Copying the Code to a New Handset

Parts Required

- 1x Teleco 868MHz Handset (Already Coded)
- 1x Teleco 868MHz Handset (Un-coded)
- 1x Paperclip or Ejector Pin

Method

1. Ensure the power to the wall unit has been on longer than 30 seconds; then hold down the P3 button once on the already coded handset for 2 seconds using the ejector pin. The wall unit will emit a continuous beep.
2. Press the button on the already coded handset. The beep will stop for 1 second then continue.
3. Now press the button on the un-coded handset, the continuous beep will become intermittent, this indicates the new handset has now been copied.
4. Once the wall unit is silent, press the programmed button on the handset to test it.

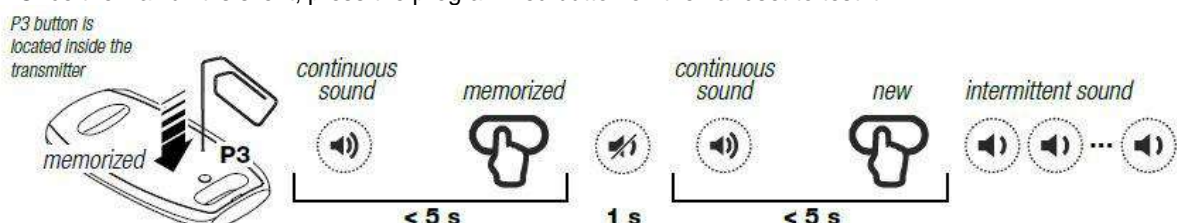


Section 3: Deleting All Handsets and Wireless Transmitters

Parts Required

- 1x Small Phillips Screwdriver
- 1x Circuit Diagram Overleaf (Figure 1)
- 1x Assembly Drawing (Figure 2)

Method

1. Remove the light cover using the side clips. Remove the bottom cover strip and unscrew the four front screws. (Figure 2)
2. Be careful to unclip the ribbon strip when pulling the front cover away from the control board.
3. Press The P2 (DEL) button five times and on the fifth press keep it held down for 10 seconds. The wall unit will emit an intermittent beep. (Figure 1)
4. Release the button once the beep become continuous.
5. Check all the connected devices have now been deleted.

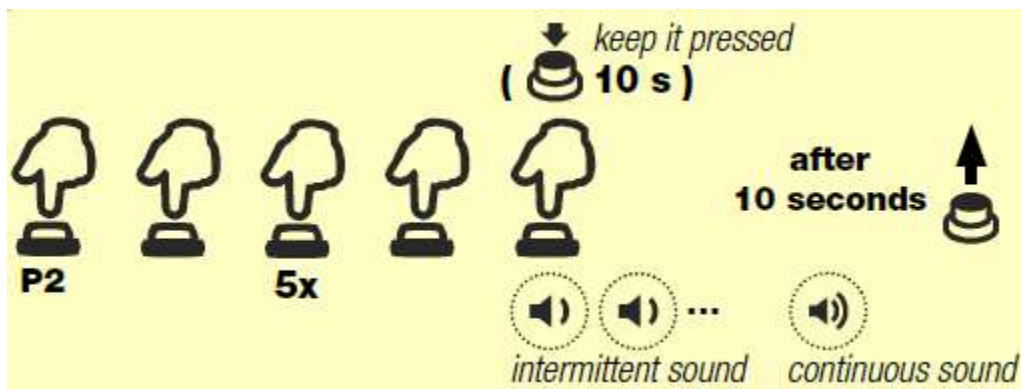

Section 4: Deleting Single Handset Only

Parts Required

- 1x Teleco 868MHz Handset (Already Coded)
- 1x Paperclip or Ejector Pin

Method

1. Press the P3 button three times, on the third press keep it held down for 2 seconds. The wall unit will emit a slow intermittent beeping.
2. Press the button on the handset within 5 seconds of the intermittent beeping and it will become continuous.
3. Once the wall unit is silent test the handset to ensure the code has been deleted.

